



Zebex Z3102 Reprogramming Sheet

Required Step 1

Enter Programming Mode



Aiming Barcode



Exit Programming Mode



Required Step 2

Enter Programming Mode



Continuous Mode



Disable Data Matrix



Disable QR Code



Enable Loyalty Fob



Exit Programming Mode



Enter Programming Mode



Exit Programming Mode



Scan Mode

Trigger Mode



Specific Area

Decoding 50%



OPTIONAL

Change of Volume

Medium 2730 Hz



OR

High 4200 Hz



Reset Factory Defaults



Only used under guidance of Customer Support