Peplink Failover Router Install Guide

Use only the short Antennas

Install by screwing into the Main and Diversity/Aux connectors ONLY

Install Power cord. Please give the router approx 3-5 minutes to power on and connect to the network
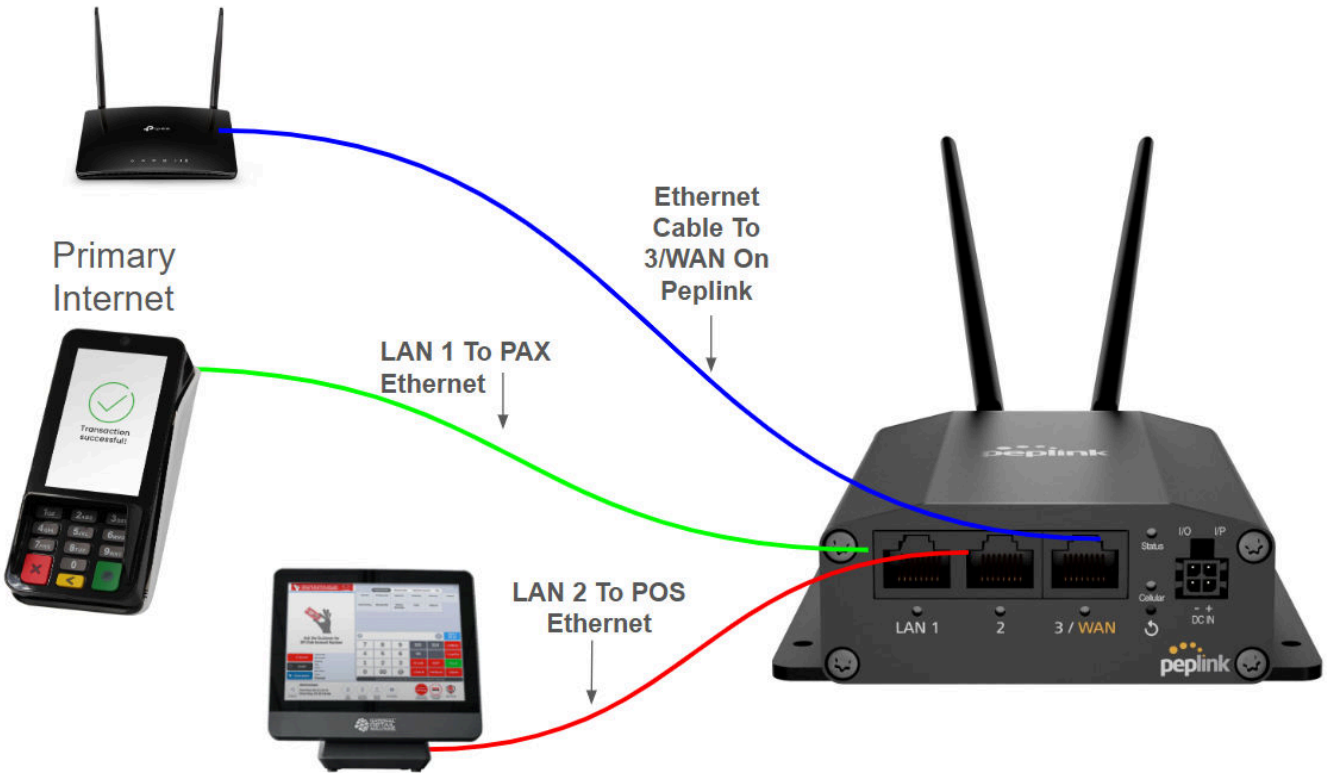
After the Status light and the Cellular light turn green follow the install chart below